PRODUCT SHEET

GB

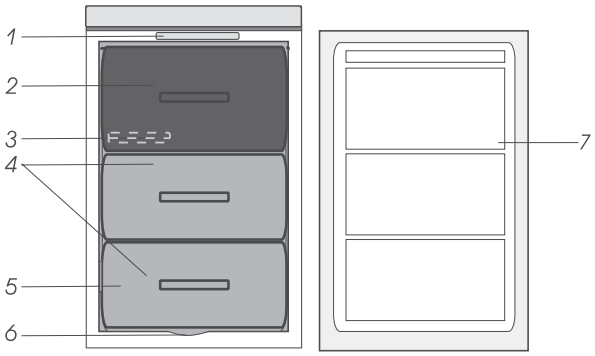

1. Control panel
2. Upper basket (area for freezing)
3. Ice tray
4. Baskets for storing frozen food
5. Rating plate
6. Pull-out defrost water drain
7. Freezer compartment door

Storage compartment

Area for freezing

Note: The design of baskets and accessories may vary, depending on the model.
All baskets, the ice tray are removable.
Important: Freezer accessories must not be washed in a dishwasher.

Note: Ambient air temperature, the frequency of door opening and the position of the appliance can affect the freezer internal temperature.
These factors must be taken into account when setting the thermostat.

The freezer is switched on by means of the thermostat located on the tabletop.

Freezer control panel

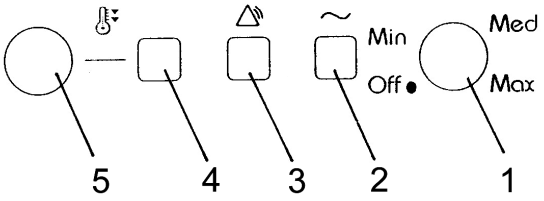

Indicator LEDs

1. Knob of the control.
2. The green LED indicates that the appliance is connected to the power supply.
3. The red LED shines or blinks indicating alarm for critical temperature within freezer (it is above -12°C) or damage sensor of freezer.
4. The yellow LED lights up when the fast freeze button is pressed or blinks together with red LED indicating damage sensor of freezer.
5. Fast freezing (push button) - fast freeze function is selected, yellow indicator lamp 4 switches on.

Freezer internal temperature control
Thermostat set to Min: internal temperature least cold
Thermostat set to Max: internal temperature coldest
Thermostat set to Off: switches off the freezer compartment only (the appliance remains connected to the power supply).
Recommended thermostat setting: Med position.

Alarm signal

Signal	Cause	Solution
The red LED (3) lights up	The internal temperature is above -12°C	Press button 5 until the temperature returns below -12°C again (the red temperature alarm LED will switch off).